Thank you for choosing a HabiStat product. Please read the instructions carefully and refer to diagrams before use. Retain all documents for future reference.

The HabiStat Rainmaker has its own 2.2L reservoir ② and delivers an adjustable spray of rain into an enclosure by using the multi-directional nozzles ③. These should be positioned on the inside of the enclosure towards the top by using the suction pads ③. Cut the Black Tubing ⑤ to length and connect to the Blue connectors on the nozzles ④. Push the connector seal down feeding the end of the black tube into the main unit as far down as it will go (roughly 1 to 2 cm). Release the blue connector ③ to secure the black tube in place.

If using a second nozzle (within the original enclosure or a second enclosure) cut a suitably sized length of black tubing and attach the second nozzle using the above method. Then use the end cap **3** after your last nozzle is in place.

Connect approximately 30cm piece of black tubing to the underside of the main unit **3** and screw in the filter **3** to the bottom of the tube. Place the main unit on a stable, hard surface, fill the 2.2L reservoir **3** with water. Do not overfill. Adjust the CYCLE(H) **4** to set how often it will rain. The units are in hours. Adjust the DURATION(S) **4** to set how long it will rain for. The units are in seconds. Plug in the power adaptor **3** and connect into the back of the main unit **4**. Turn the POWER on **4** and adjust the rain intensity from min to max as required. The unit will begin to "rain" after the hours set on the CYCLE(H) **3**. If you want to operate the unit manually leave the CYCLE(H) **4** set at "0" and the unit will turn on immediately the POWER **6** is switched on. The unit will not turn off until POWER **6** is switched off in this mode.

Warning:

- Only add clean water to the unit.
- Ensure that the Rainmaker is placed on a stable, hard surface.
- Before connecting the device, confirm the voltage first. It can only be connected to power with 100-240V – 50/60HZ.
- Do not let the unit run dry as this may damage the pump.
- For indoor use only.

- Clean the tank every 2-3 weeks to avoid the build up of limescale. Wipe with a soft, damp cloth with a small amount of detergent and rinse with clean water.
- Ensure any necessary repairs are carried out by the manufacturer or service agent.
- The manufacturer shall not be responsible for any damage to the product or accidents caused by the user's failure to comply with the requirements listed.

HabiStat Rainmaker Instruction Manual



Main Unit

2.2L Reservoir

Filter

2xNozzles

6 5M Black Tubing

3 Tubing end cap

7 Power Adaptor (Regional variations available)



